

Operation Instruction:

A. Operation by hand(as diagram 1):

1. Turn on the power switch on the back of the subwoofer, the system into ST-BY mode, the ST-BY/MUTE LED is lighted, turn the master volume knob to turn on the system.
2. Press INPUT SEL button to select the audio input mode between 5.1CH/CD and AUX.
3. Turn the master volume knob to adjust the volume level.

B. Operation by remote control(as diagram 2):

1. While ST-BY mode, ST-BY/MUTE LED is lighted, other indicator off. Press ST-BY key, the system turn on, the ST-BY/MUTE LED off
2. Press INPUT SEL key to select 5.1CH/CD or AUX.
3. Press MODE key to select 5.1CH or 2.1CH output.
4. Press Volume +/- key adjusting Volume, adjusting range 0-80dB (default 40dB). (1)press VOLUME+, VOLUME LED is flashed, until 80dB the LED flashed stop. (2)press VOLUME-, VOLUME LED is flashed, until 0dB the LED flashed stop.
5. Press SUB-WOOF +/- key adjusting subwoofer volume, adjusting range +/-7 dB (default 0dB). While press SUB-WOOF +/- key, the VOLUME LED is flashed as above.
6. Press CENTER +/- adjusting the CENTER VOLUME, adjusting range +/- 7dB, and the CENTER LED is flashed.
7. Press SURR +/- key adjusting the tone of surround, adjusting range +/- 7dB, and the VOLUME LED is flashed.
8. Press MUTE key, the sound will be muted, and the ST-BY/MUTE LED is flashed, press again or press Volume key, the MUTE off.
9. Press RESET key, the adjusted SUB-W +/-, CENTER +/- and SURR +/- Volume reset to normal(0dB).

Specification

*Amplifier specification:

AC IN	220V-240V~ 50Hz 300mA
Power output	22W+8Wx5 RMS
Frequency response	30Hz-20KHz
Sensitivity	350mV
Harmonic distortion	<0.3% 1W 1KHz
S/N	>80dB
Separation	>45dB

*Speaker unit:

Subwoofer	5.25" magnetically shielded
Satellite	2.5"x5" magnetically shielded

*Audio input:

*Audio output:

*Product size:

Subwoofer	340x165x240mm
Satellites	85x100x165mm

Caution:

1. Do not exposed to dripping or splashing.
2. Do not placed any objects filled with water over the apparatus.
3. Do not block the ventilation holes.
4. For indoor use only.
5. When using high output signal, please don't turn the volume to maximum to avoid distortion.
6. In case of long time not using, please plug off the power plug.



80-M860-97-0001-02 2008-07-04出

Inside Package:

Subwoofer speaker	1 pc
Satellite speaker	5 pcs
3.5ST-2RCA audio cable	1 pc
2RCA-2RCA audio cables	3 pcs
Remote control	1 pc
User manual	1 pcs

System Connection(as diagram 3):


Warning: before connecting the speakers, make sure that the power plug is disconnected from the AC outlet.

1. Connect Front Left/Right, Center, Surround Left/Right speaker cables to the appropriate audio output jacks on the back of the subwoofer.
2. Connect one end of the 2RCA-2RCA audio cable to the appropriate 5.1CH/CD input jacks of the Front Left/Right, Center, Surround Left/Right channel on the back of the subwoofer, the other end to the appropriate audio output jacks on the DVD or the other audio source.
3. If connect to any 2-channel audio source, just connect one end of the 2RCA-2RCA audio cable to the R/L AUX input jacks on the back of the subwoofer.
4. If connect to PC soundcard or any audio source only with headset output, then please use the 2RCA-3.5mm audio cable.
5. The jacks and plugs are color-coded. Be sure to attach each color-coded plug to a matching color coded jack.
6. Make sure all the cables are connected correctly, connect the power plug to the correct AC outlet.

Remarks the system positioning:

- * The system is magnetically shielded which could be positioned besides the PC monitor or near the TV.
- * Please refer to sound card instruction when connect 5.1 channel sound card.
- * Statement indicating that the socket-outlet shall be installed near the equipment and shall be easily accessible.
- * The highest environmental temperature suitable for this product is 40°C.


(Diagram 1) Front Panel

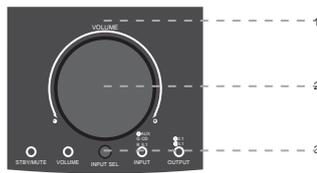


Controls on the front of Subwoofer

1. Remote Control Signal Receiving Window and LED display
2. Master Volume Knob:
The master volume could be adjusted either by hand or remote control
3. Input selection button

(Diagram 2) Remote Control

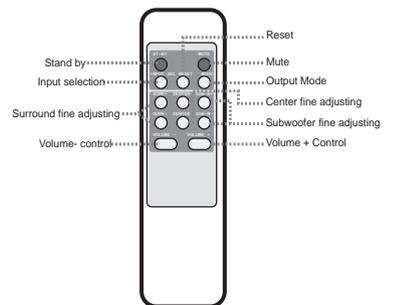

(Diagram 3)

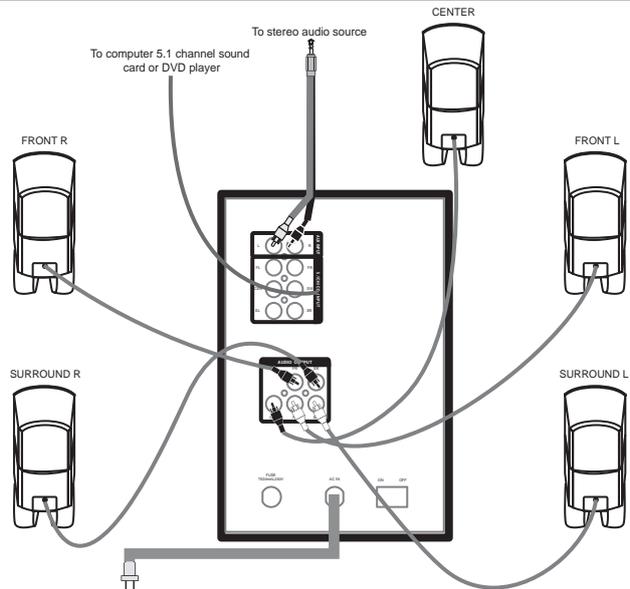

*Please note the correct placement of speaker is shown in the above picture.